



## Windchill Operations

---

Windchill Overview

Exchange and Share Using Clipboard

## Products and Product Data Management

---

### Overview

PDMLink Introduction  
Controlling Product Data

Understanding Search in  
Windchill PDMLink

### Change Management

Understanding the CMII Change  
Process  
Interpreting and Using the  
Change Monitor

Measuring Distance and  
Dimensions of CAD Parts

### Pro/INTRALINK Menu Mapper

Pro/INTRALINK 3.4 to Windchill  
PDMLink 8.0 Menu Mapper

### Administration

Creating a Product  
Creating a Library

### Creating Parts and Part Structures

Using the Product Structure Explorer  
(PSE)  
Using the HTML Structure Browser  
Creating Parts in Windchill PDMLink  
Creating Parts in PSE Using the  
Duplicate Operation  
Using Save As to Create Derived  
Designs  
Creating Part to Document  
Relationships in the HTML Structure  
Browser  
Creating a Multilevel BOM  
Comparison Report  
Creating a Where Used Report

Create a Managed Baseline

Viewing Files

### Navigation

Basic Windchill PDMLink  
Navigation  
Using Folders and Folder  
Actions

### Creating Documents and Document Structures

Creating a Single Document  
Creating Multiple Documents  
in the Folder Browser  
Creating Document Uses  
Relationships

Annotation

Installing the Viewer

## Projects and Project Collaboration

---

### Overview

Product Introduction  
Layout and Navigation  
Creating a Project

### Managing CAD Models

Creating Parts  
Managing a BOM

#### Pro/ENGINEER Wildfire

Registering a Project From  
Pro/ENGINEER  
Registering a Project From Windchill  
ProjectLink

### Managing Files

Create Folders  
Create Document  
Create Multiple Documents  
Editing Documents  
Copying Objects  
Replacing Files  
Sharing Objects  
Creating Links  
Creating References  
Creating Templates  
Creating From Template  
Controlling Access  
Viewing Files

### Collaborating

Discussing Projects  
Discussing  
Documents  
Subscribing  
Routing Documents  
Approval Routing  
Notify Routing  
Release Routing  
Review Routing  
Web Meetings  
Updating Meetings  
Starting Meetings  
Joining Meetings

Saving Pro/ENGINEER Files to a Project  
Retrieving Pro/ENGINEER Files From a Project  
Viewing Details  
Desktop Integration

**Other CAD Tools**

Installing Windchill CAD Workgroup  
Managers  
Publishing Viewables  
Publishing Packages  
Publishing Structures

**View and Markup**

Installing the Viewer  
Viewing Files  
Measuring Distance and Dimension of  
CAD Parts  
Annotation

**Managing Projects**

Creating a Plan  
Updating a Plan  
Managing Milestones  
Managing Activities

**Reports**

Project Details  
Project Reports  
Personal Reports  
Tracking Schedule  
Tracking Cost  
Tracking Work

**Microsoft Project Editing**

Installing the Plug-in  
Importing a Plan  
Exporting a Plan  
Editing a Plan

**Teams and Resources**

Managing a Team  
Creating Resources  
Viewing Resources

**Managing Project Spaces**

Accessing the Projects List  
Managing Project States  
Understanding Search in Windchill  
ProjectLink  
Exporting to a File  
Importing Project Data  
Save as New Project